

## 1 EM5.5 5.6 Change Instructions

<<03/11/15>>

Either from the passenger door or from within the habitation area access can be gained to the B Pillar.

At the bottom of the B Pillar there is a small access panel secured with two pozidrive screws, removing the two screws will allow the panel to be removed. The EM5.5 is stored behind the panel.



Photo 1: Two screws in lower panel



Photo 2: With panel removed the EM5.5 can be seen

There are two camera leads (shown in the photo as black cables the reverse has a band of white tape on). There is also one purple cable which is the cable to the monitor and finally a power connector.

The power connector should be removed first followed camera & monitor cables

The new EM5.6 unit can be then fitted by reversing the procedure.



EM5.5/5.6 unit

Photo3: Connections to the

Test the system before storing the EM5.6 and refitting the B pillar cover.