

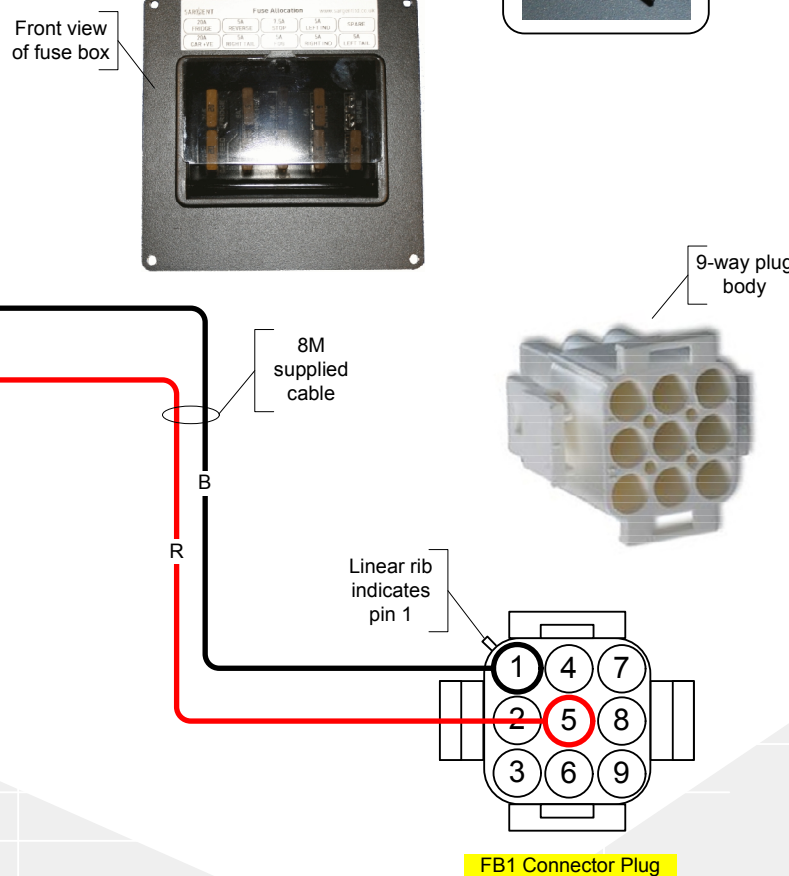
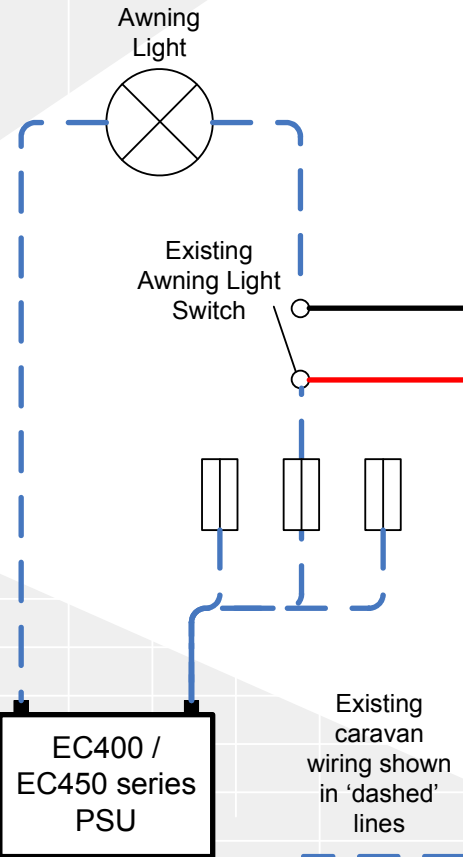
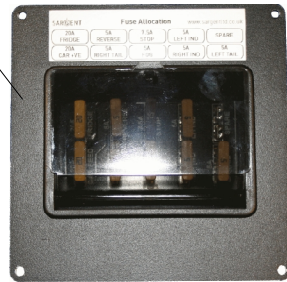


Awning Light Wiring to Stinger 310 – Swift Caravans (part WB2014 / drg 72023-09B)

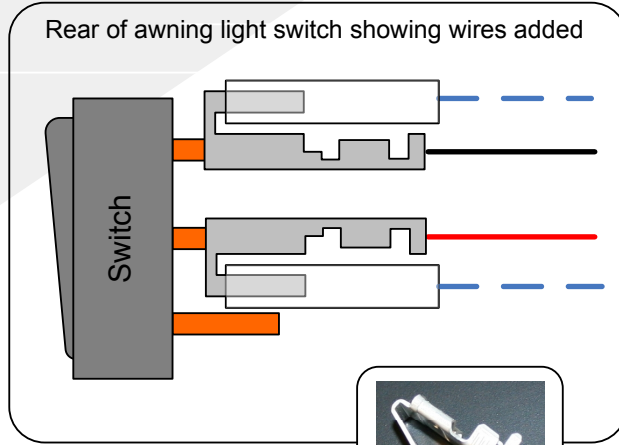

- Locate the road light fuse box and remove the mounting screws.
- Locate connector FB1 (white 9-way connector)
- The supplied cable has terminals fitted to one end; insert the red wire into connector position 5 and the black wire into position 1. The terminals will click and lock into the plug body. Please note, the 9-way plug body shown is already fitted to the caravan wiring harness.
- Route the supplied cable around the caravan to the rear of the awning light switch. Trim to length as required.
- Strip the wires and fit the supplied 'piggy back' terminals. These need to be crimped with an appropriate tool or soldered to the wires.
- Referring to the diagram of the switch, remove the existing terminals and fit to 'blade' part of the piggy terminal.
- Fit the piggy terminals to the switch as shown. You may need to add a layer of insulation tape to stop the terminals touching each other.
- The awning light will now work from the switch or alarm fob.
- Please note the awning switch should be in the off position to allow control via the alarm.

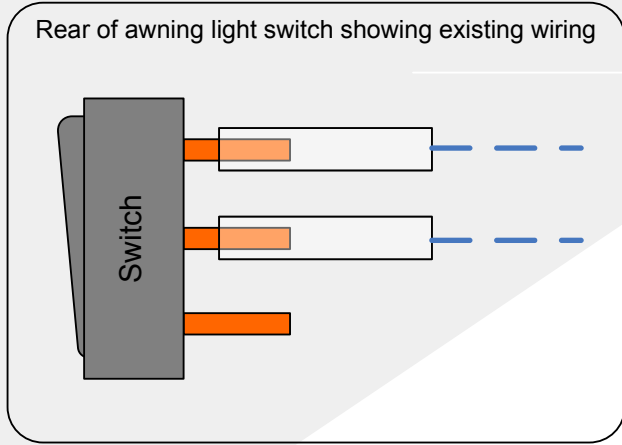